




## Installing your OpenEZ™ Trunk Lift

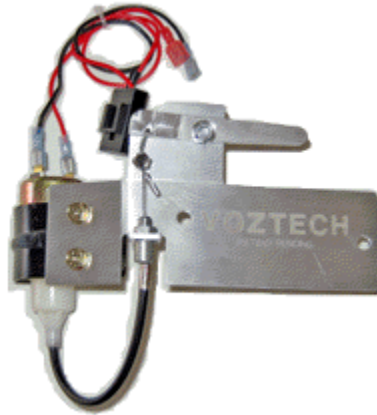

Purchaser assumes all risk associated with the installation of all products we offer. VōZtech, its owners and employees, along with the manufacturer of each product, are not responsible for any direct or indirect damage to the vehicle or costs incurred from the installation or use of any products sold or otherwise provided.



Thank you for your purchase! Now its time to install and begin enjoying the added convenience of your new OpenEZ™.

### Step 1.

You will need to remove the storage lids and trim pieces in the back of the trunk area. The storage lids lift out. (Fig. 1a and 1b) The left and right trim pieces are held in place by 2 thumb screws as seen in Fig. 1c and 1d. Remove these thumb screws.



Fig. 1a

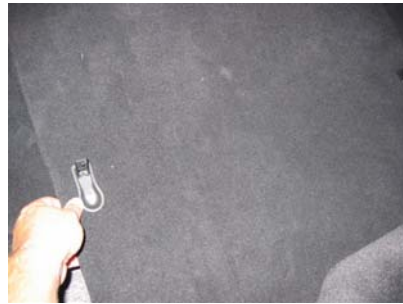


Fig. 1b



Fig. 1c



Fig. 1d

### Step 2.

You should now be able to gently pull the left and right trim pieces out from the back wall of the trunk. There are also metal clips at the top of each which help hold them in place. You will also need to pop the corner lights out as you pull the trim loose. See Fig. 2a thru 2d.



Fig. 2a



Fig. 2b



Fig. 2c



Fig. 2d

### Step 3.

The next step is to pull the center trim piece out of the way. At this point the trim piece should easily be removed. See Fig. 3a and 3b.



Fig. 3a



Fig. 3b

### Step 4.

The next step is to loosen the trunk latch assembly; this is held in place by 2 10mm bolts. Remove these bolts using a 10mm ratchet as shown in Fig. 4a. The OpenEZ™ will be placed behind the factory trunk release as in Fig. 4b.



Fig. 4a



Fig. 4b

#### Step 5.

Once you have the OpenEZ™ sandwiched between the body and the factory mechanism you will want to adjust the alignment of the latch. Leave the 2 bolts somewhat loose while you lower the trunk lid (DO NOT CLOSE IT) and look at the alignment. This may require a flashlight. The mechanism can be adjusted in all directions, use the marks originally left in the paint by the bolts, this will help align everything after install. When everything looks good tighten the 2 bolts as shown in Fig. 4b.

#### Step 6.

Next you will need to crimp the red and green wires on the OpenEZ™ to the factory trunk release wires. See Fig. 6a. The RED wire will be crimped onto the BLUE wire, the GREEN wire to the existing BLACK one using the provided connectors. See Fig. 6b.



Fig. 6a

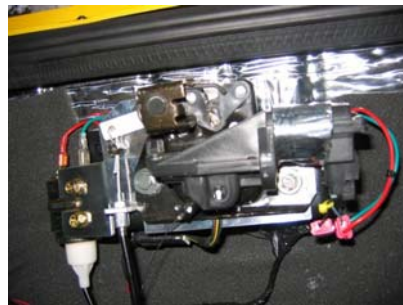


Fig. 6b

#### Step 7.

Your finished install should look similar to Fig. 7. Now you will want to test the install before replacing your trim pieces. Make sure the trunk lid alignment is correct when closed. Make sure the OpenEZ™ is lifting the lid as expected when you release the trunk. You will have to loosen the 2 10mm bolts to adjust.

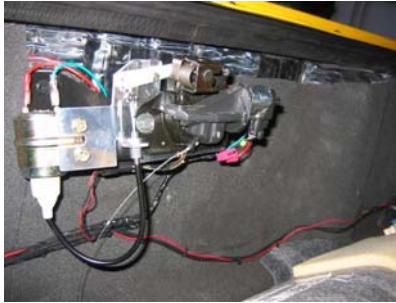


Fig. 7

Step 8.

Replace the trim panels; center first, then each side piece. Replace the 4 thumb screws and the storage lids.

Now stand back and pop your trunk! Enjoy opening it without digging your fingernails into the paint!

Please contact us if you have any issues or require further assistance.

[support@vettemods.com](mailto:support@vettemods.com)

Thanks, and enjoy your new <http://www.vettemods.com> product!